1

Several stages in this kit don't require glue; look for icon at each step.

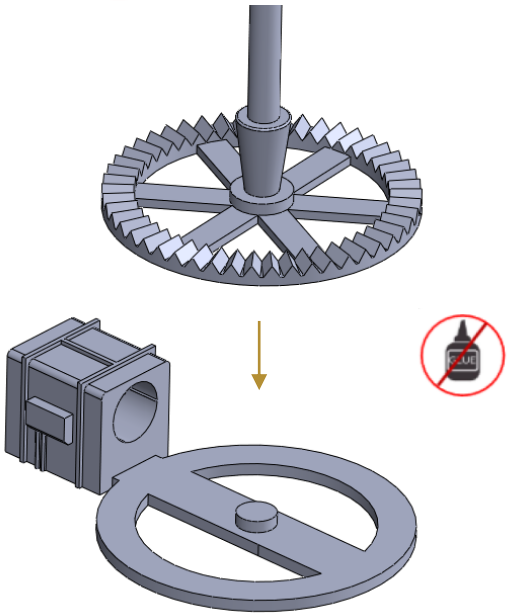

2

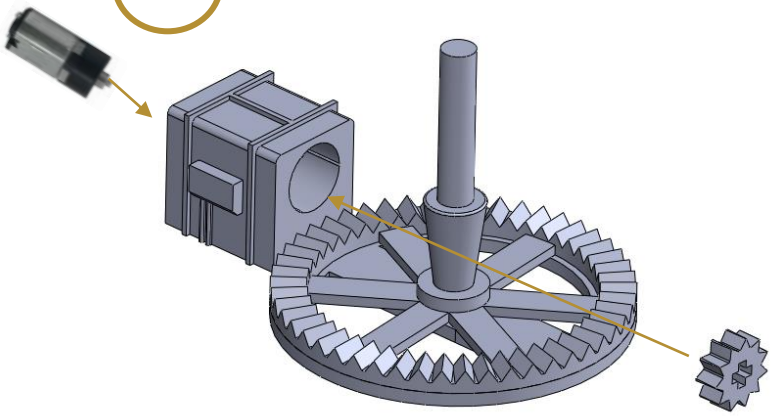

3

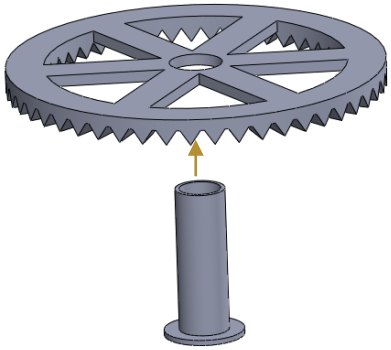

4

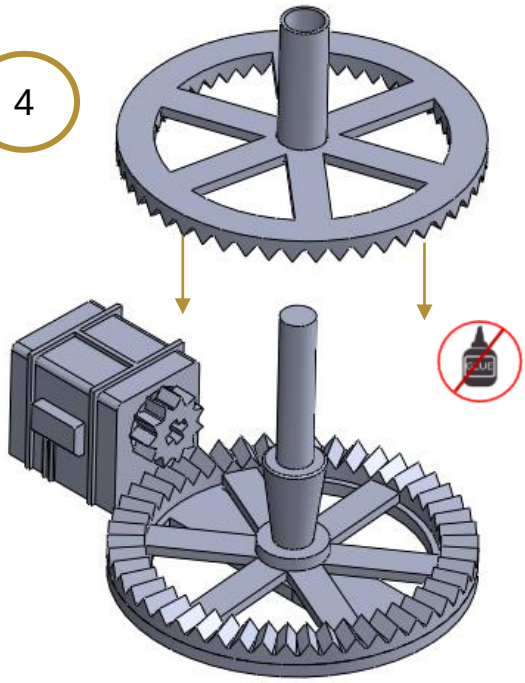

5

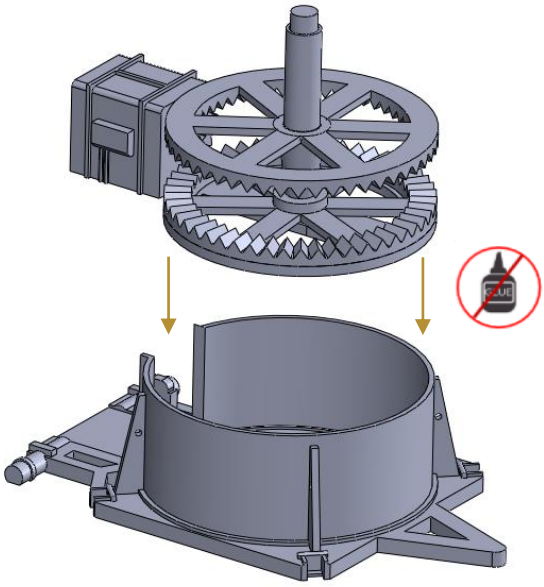

6

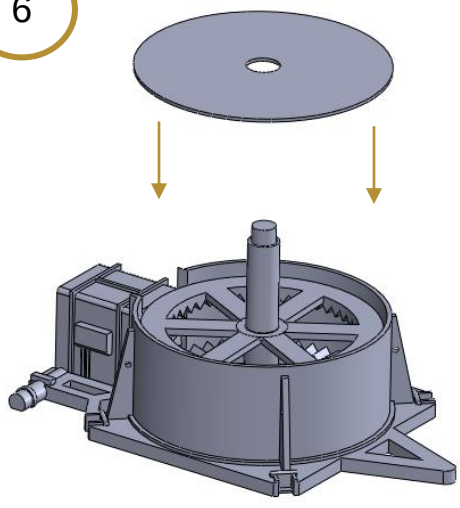

Test run mechanism before securing lid

7

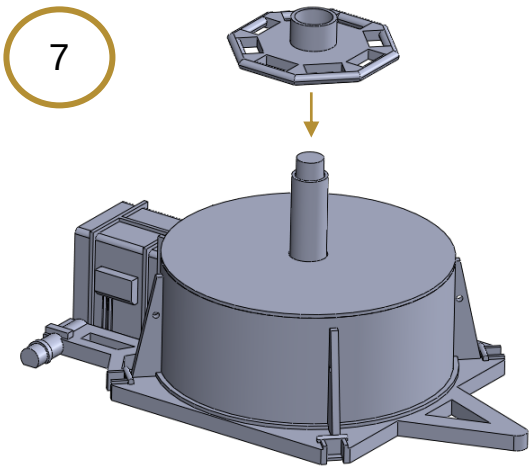

Ensure piece is no higher than lower sleeve

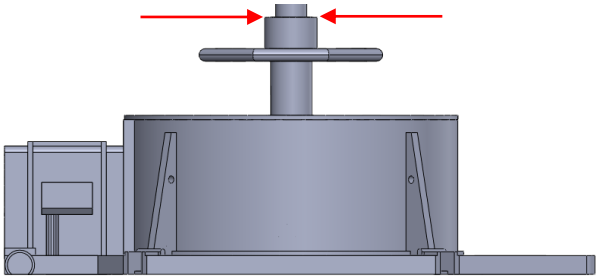

8

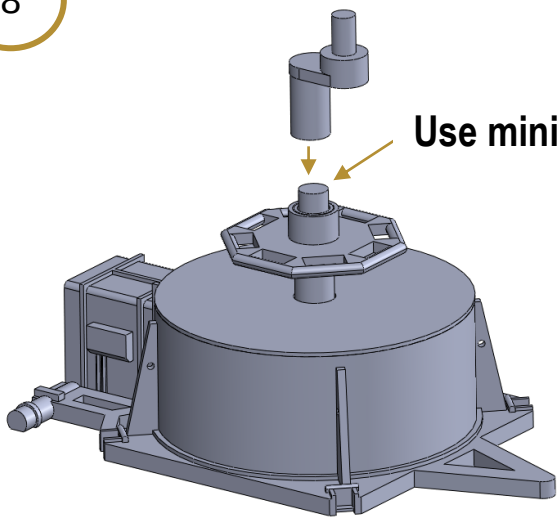

Use minimal glue

9

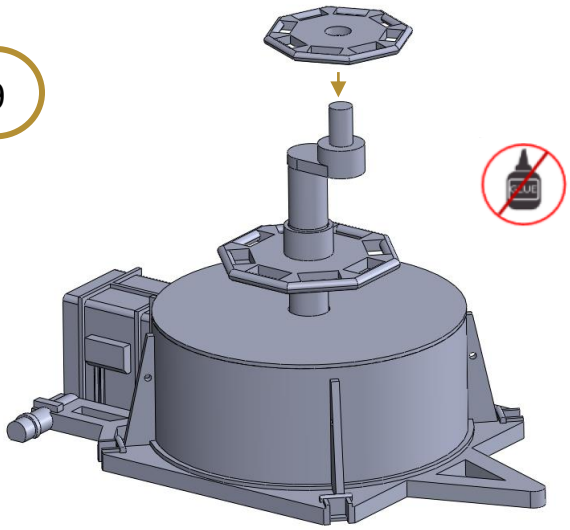

10

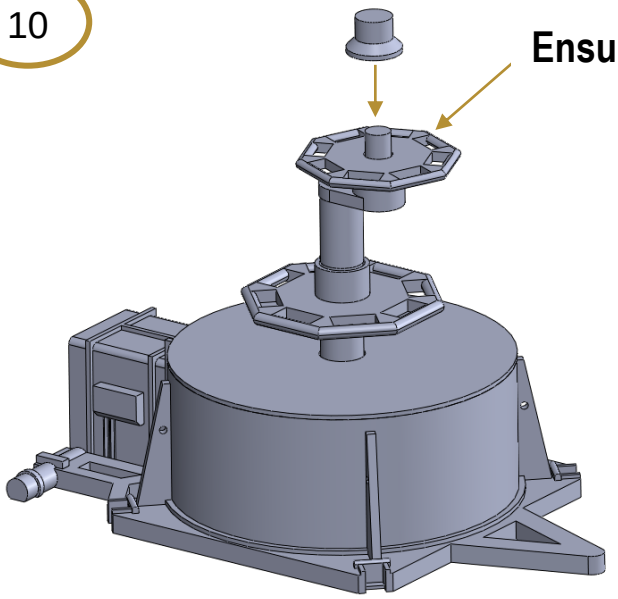

Ensure piece is free to spin

11

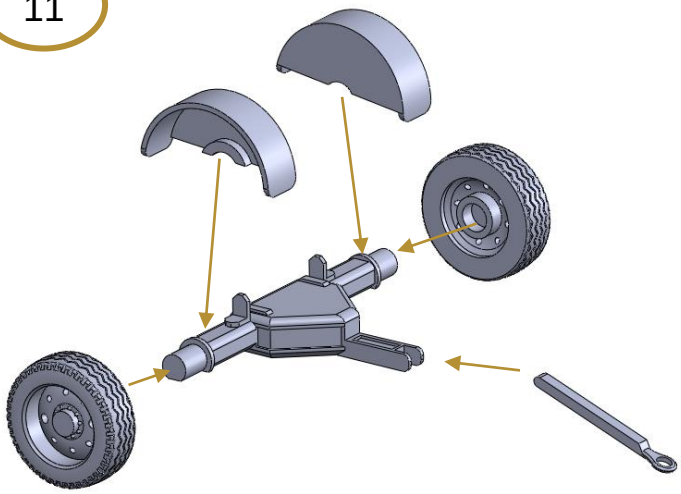

12

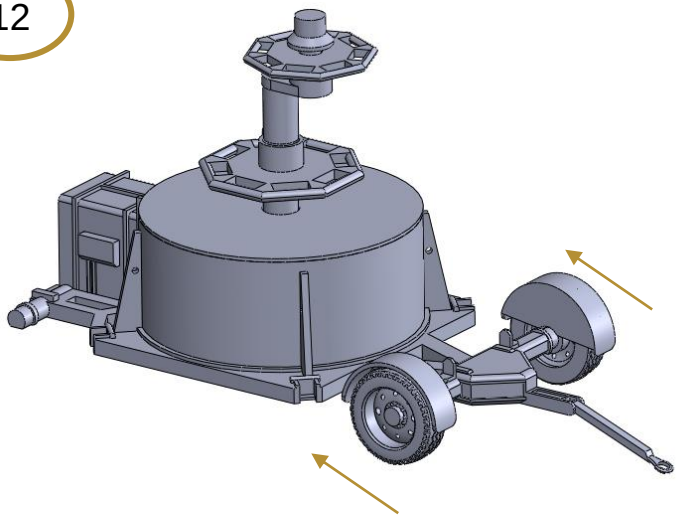

13

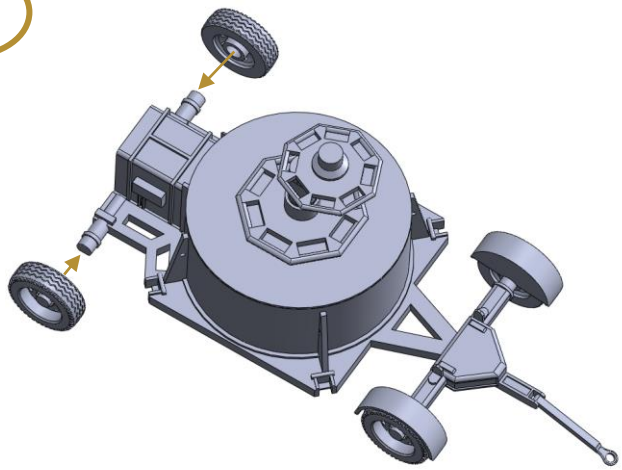

14

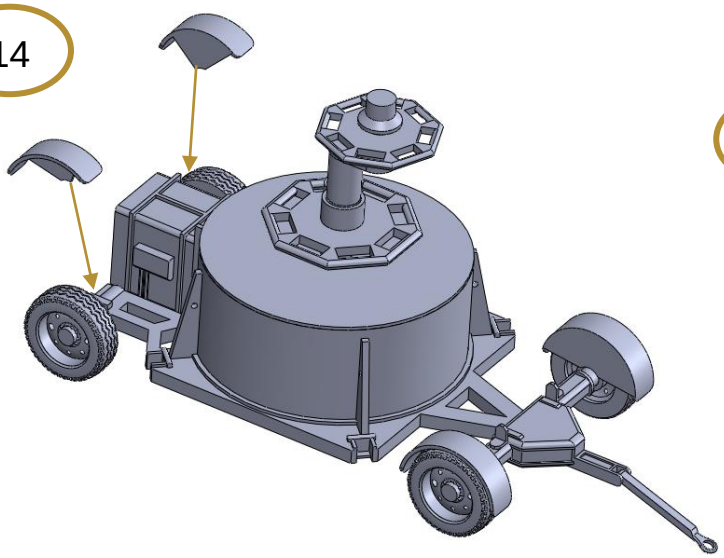

15

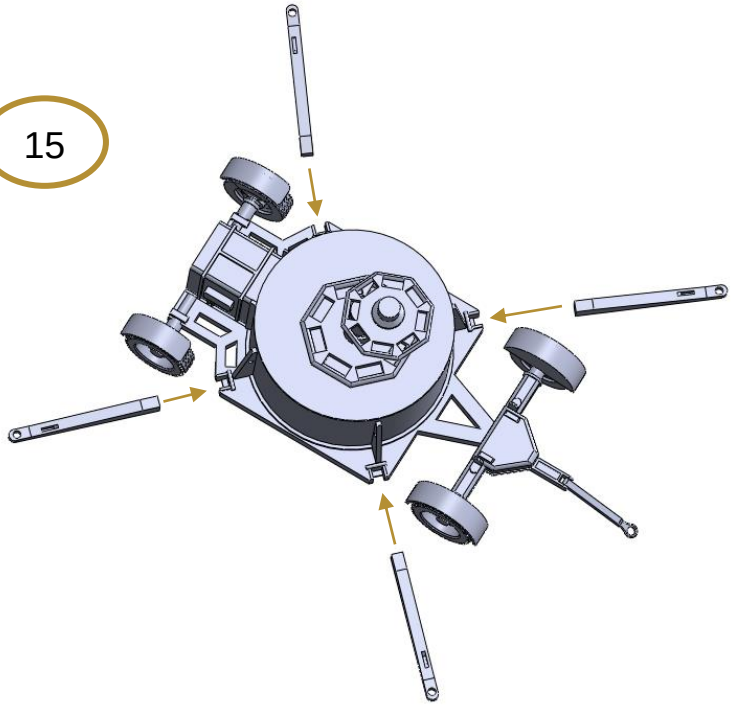

16

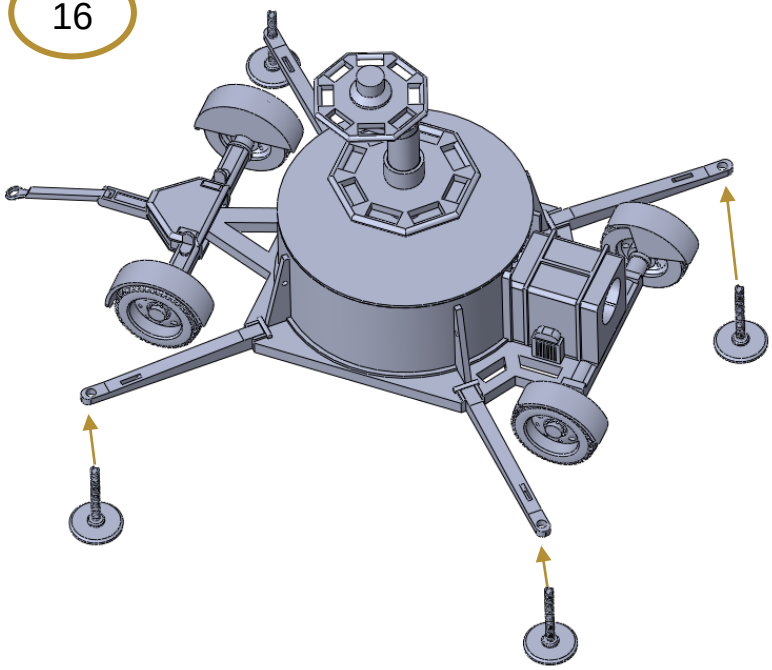

17

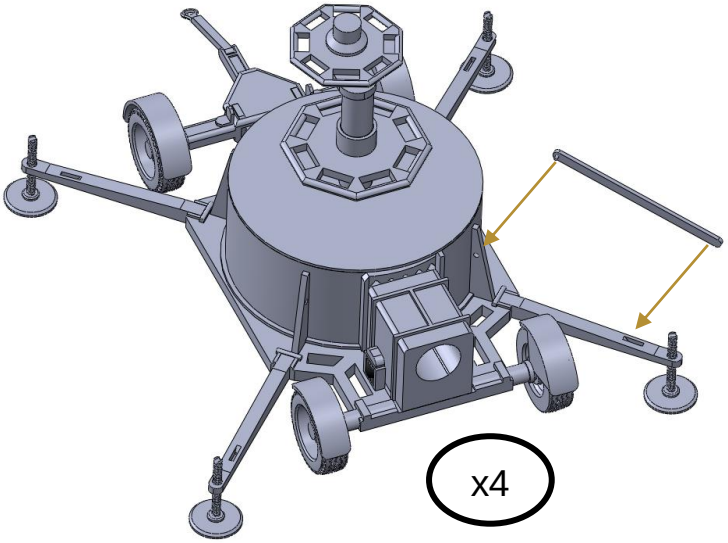

x4

18

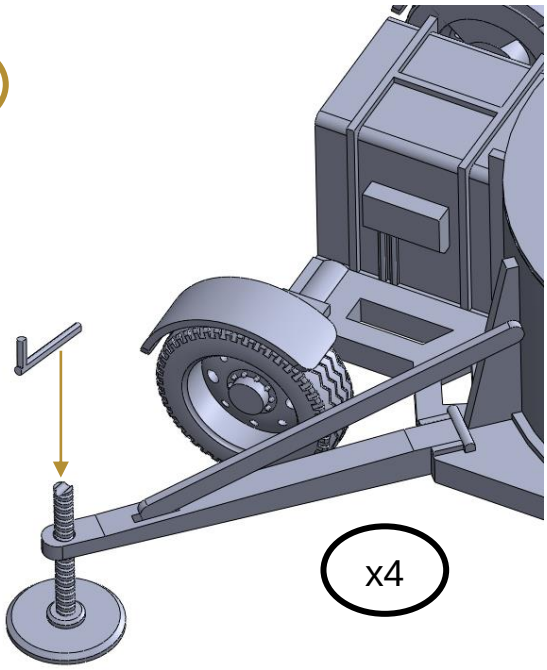

x4

19

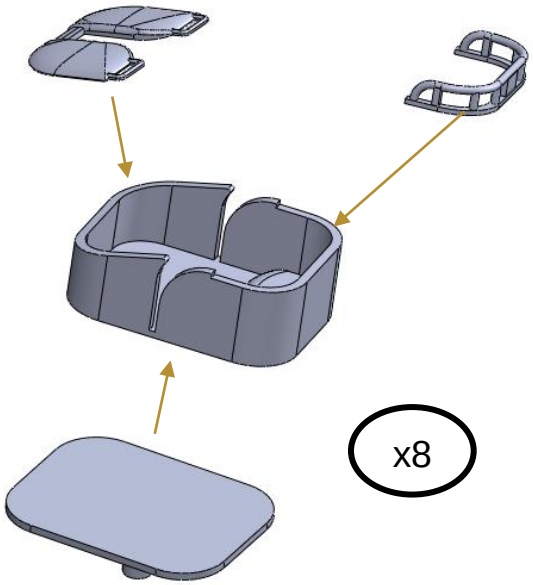

x8

20

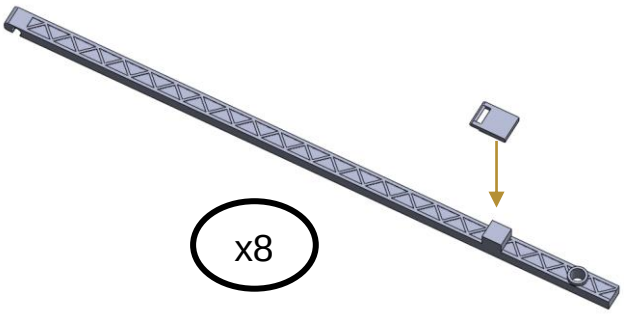

x8

21

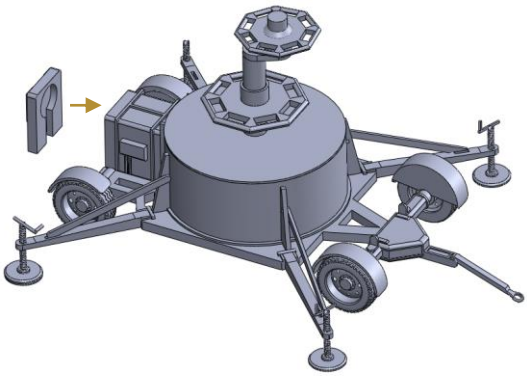

22

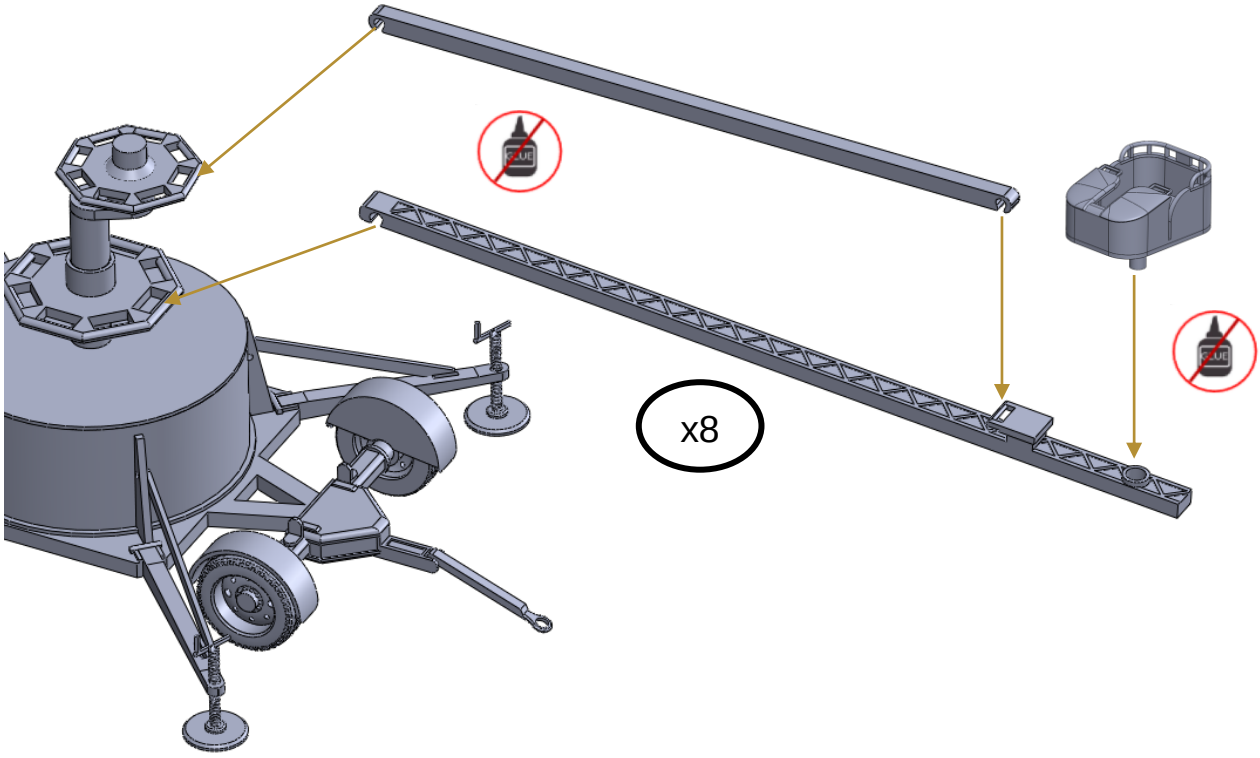

x8

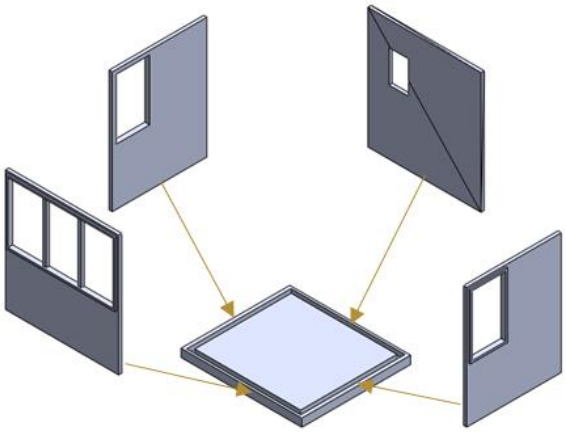

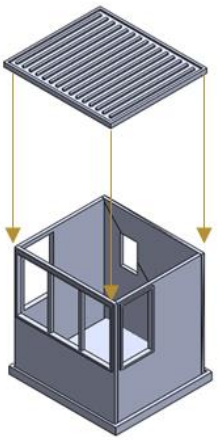

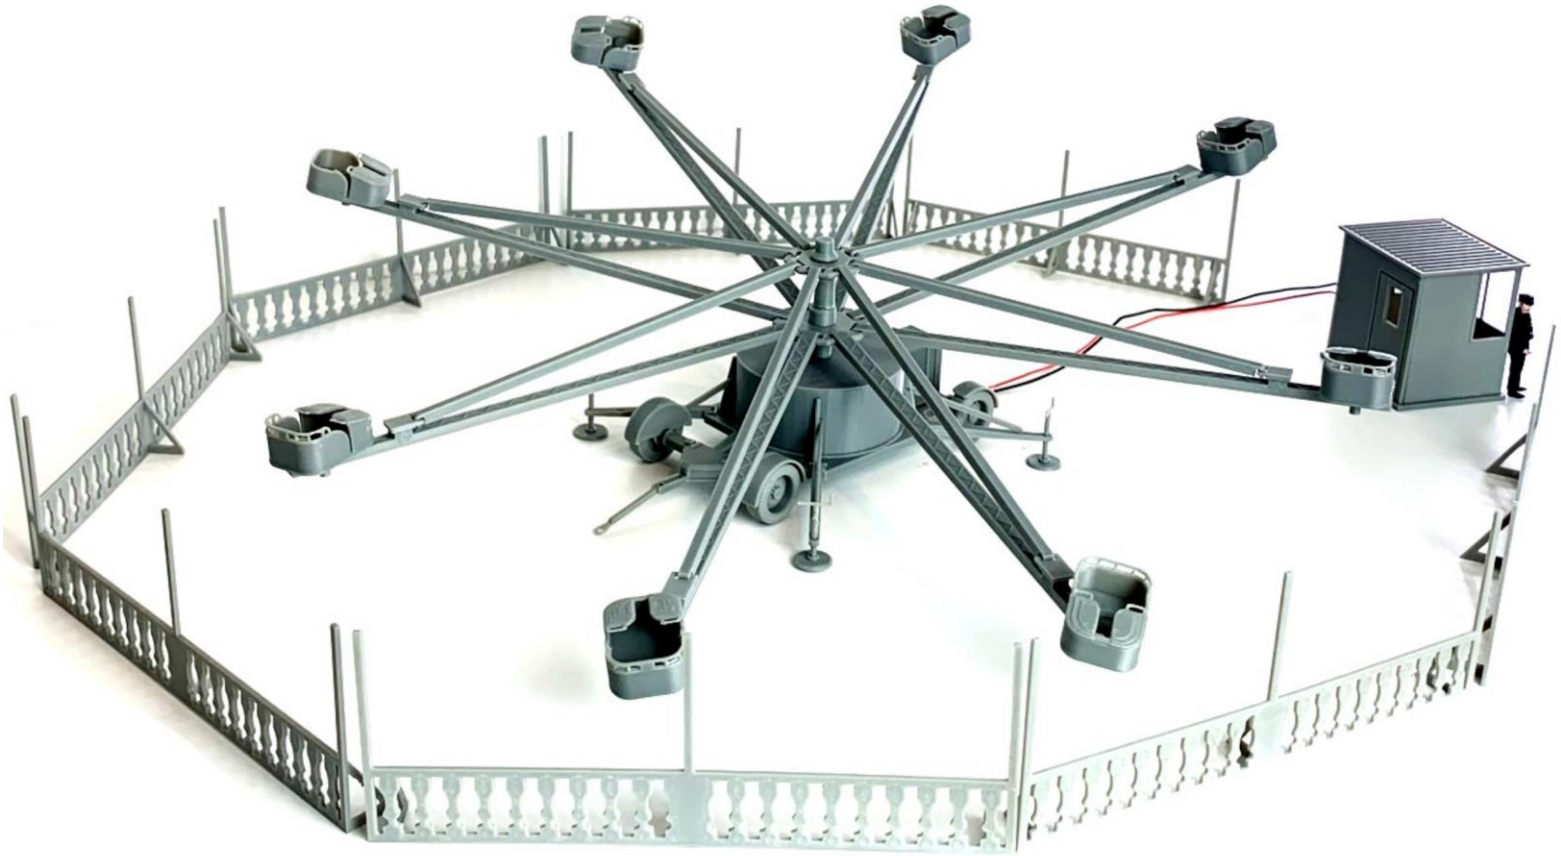

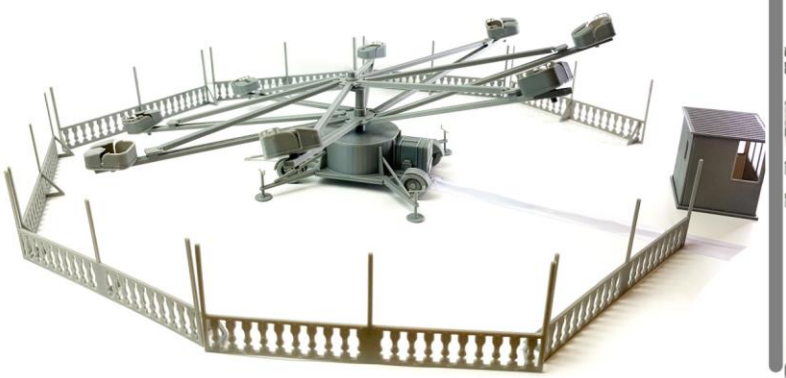

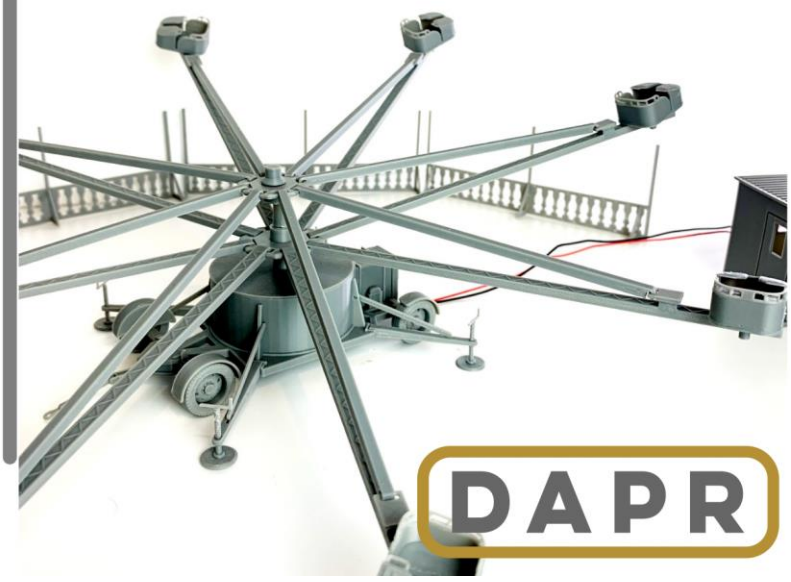

DAPR